

ULTRASONIC MULTICLEANER


General Purpose Detergent Water Based

Technical Information

PHYSICAL DATA

Appearance:	yellowish
Specific gravity (at 20°C):	1.19
Flash point PM CC:	none
pH (1% solution):	approx. 11,5
Contains	approx. 8% sodium hydroxide

USAGE AREAS

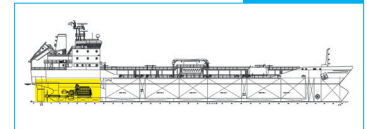

DESCRIPTION

- Suitable for use on all common metals (except zinc and some magnesium alloys)
- Designed for ultrasonic equipment
- Easy to dispose
- Low foaming so can be used in cleaning machines (Bumpy Cleaners)

The cleaning of heavily contaminated fuel and lubricating oil filter, cylinder heads and aircoolers often give problems. The use of a cleaning agent only is generally unsatisfactory as only a part of the deposits will be removed, and in most cases carbon residues and other solid materials will be left behind. In such cases the use of ultrasonic sound waves in combination with a special cleaning agent gives good results. The contamination will be removed by the ultrasonic process in the liquid. The special detergents in the cleaning agent keep the contamination dispersed in the liquid and the complexing agents will partly dissolve them. ULTRASONIC MULTI CLEANER has been developed for use in ultrasonic baths for the cleaning of all materials except zinc, galvanised parts and/ or magnesium alloy.

APPLICATION

ULTRASONIC MULTI CLEANER is used in ultrasonic cleaning baths and in cleaning machines.

DIRECTIONS FOR USE

Ultrasonic Cleaning Bath

The components to be cleaned can, if necessary, be degreased with COLDWASH or CLEAN BREAK or LECTRO CLEAN FAST. Depending on the degree of contamination. ULTRASONIC MULTI CLEANER should be used in a 5-25% solution in water at a temperature of 50-70° C. Dismantle the equipment to be cleaned (i.e.: remove top and bottom rings from filtercandles), put the components in the bath taking care that the elements are completely immersed and kept separate. We recommend a cleaning time of 5-30 minutes but longer if necessary. Take the elements out of the bath and spray with a powerful water-jet. After drying, TANKOTE or NAVALAN 402 can be used to preserve the elements. The cleaning solution has to be renewed and the bath cleaned regularly, because in a contaminated bath the parts cannot be cleaned effectively.

(follow)

ULTRASONIC MULTICLEANER

Cleaning Machines

ULTRASONIC MULTI CLEANER is, depending on the nature and degree of contamination, applied in an approx. 4% solution in cleaning machines. The contaminated object must be placed in the machine and cleaned for 30-60 min. at a temperature of 80-90° C. Finally rinse with water.

Product Characteristics

ULTRASONIC MULTI CLEANER is a low foaming mild alkaline liquid. It can be used on all common metals except zinc, galvanised materials and some magnesium alloys. We advise to test light-metal alloys (aluminium / magnesium alloys etc.) i.e. pistons, turboblower parts etc. in advance for 5-10 minutes. Suitable for use on synthetic materials, rubber and cured lacquers.

IMPORTANT NOTICE

While the descriptions, designs, data and information contained herein are presented in good faith and believed to be accurate, this information is provided for your guidance only. Because many factors may affect processing or application/use, we recommend that you do a test to determine the suitability of a product for your particular purpose prior to use. No warranties of any kind, either expressed or implied, including warranties of merchantability or fitness for a particular purpose, are made regarding products described or designs, data or information set forth, or that the products, designs, data or information may be used without infringing the intellectual property rights of others. In no case shall the descriptions, information, data or designs provided be considered a part of our terms and conditions of sale. Further, you expressly understand and agree that the descriptions, designs, data and information furnished by Uniservice Unisafe Srl hereunder are given gratis, and Uniservice Unisafe Srl assumes no obligation or liability for the description, designs, data and information given or results obtained, all such being given and accepted at your risk.